


MAXNET® AMPLIFIERS, RF DETECTORS & SWITCHES

Installation Instructions

Step 1:

Approach chassis with a module on a forward angle. Make sure the captive screw on module lines up with a black triangle on top rail (slot 1, 3, 5, 7, 9, 11, 13, 15, or 17).

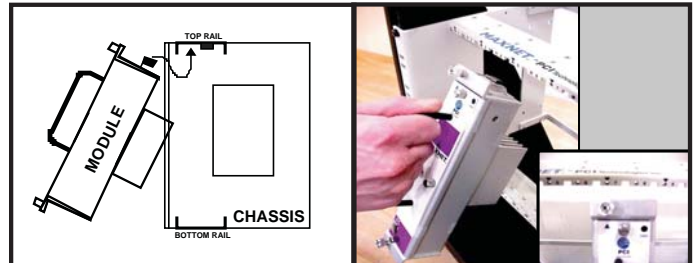


Step 2:

Hook connector (located on top of amp module) under the top rail flange.




Step 3:

Straighten the module by bringing the bottom of the module in until perpendicular.

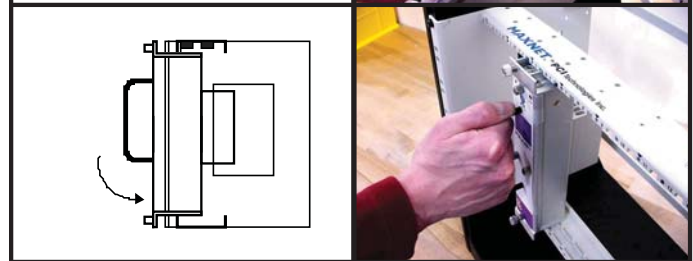

Step 4:

Apply forward pressure until module connects flush to chassis rails. Then tighten captive module screws into chassis.

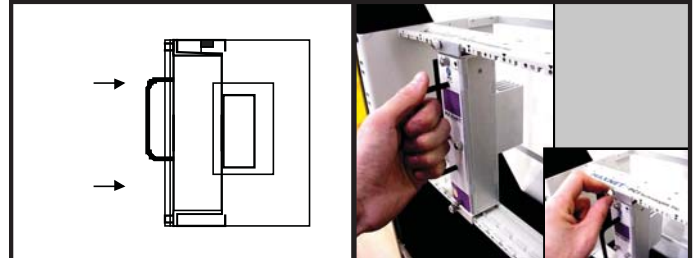

When removing module, follow instructions in reverse order.

IMPORTANT: Disconnect connector in top rail first before pulling on bottom of module so as not to damage the connector.

Service & Support

Contact ATX Networks

Please contact ATX Technical Support for assistance with any ATX products. Please contact ATX Customer Service to obtain a valid RMA number for any ATX products that require service and are in or out-of-warranty before returning a failed module to the factory.

ATX Networks
1-501 Clements Road West
Ajax, ON L1S 7H4 Canada

Tel: (905) 428-6068
Toll Free: (800) 565-7488
Fax: (905) 427-1964
Toll Free Fax: (866) 427-1964
Web: www.atxnetworks.com
E-mail: support@atxnetworks.com

Warranty Information

All of ATX Networks' products have a 1-year warranty that covers manufacturer's defects or failures.



1-501 Clements Road West, Ajax, ON L1S 7H4 Canada
Tel +1 (905) 428-6068 Toll Free +1 (800) 565-7488 Fax +1 (905) 427-1964 Toll Free Fax +1 (866) 427-1964
www.atxnetworks.com support@atxnetworks.com